

# Running Board Instructions

## 1180

( 02-09 ) Chevy Trailblazer Extended  
( 02-08 ) GMC Envoy Extended  
( 03-08 ) Isuzu Assender Extended  
( 7 ) Passenger

( No Drilling Required )

### INSTALLATION PACKAGE

Running Board	2
Bracket s	10
Bolt Packs	2

### Necessary Tools

Ratchet wrench with 1/2" & 13 mm socket  
Combination wrench  
Safety glasses

#### Bolt Pack Brackets

8mm x 20mm Hex bolt	10
5/16" Flat washers	10

#### Bolt Pack Running Boards

5/16" x 3/4" Hex Bolt	20
5/16" x 3/4" Serrated Flange Nut	20

### STEP ONE : Determine proper bracket placement Fig A

1. There are several places on the inside of the rocker panel were the brackets need to be placed
2. Place a bracket at the factory hole locations front and rear and space the other bracket evenly in the middle or at your desired location.
3. Loosely bolt ( hand tighten ) brackets to humps on inside of rocker panel using 8mm bolts shown Fig B. Do this with all brackets putting them in their proper place.

### STEP TWO : Board Installation & Check.

1. Place board on brackets by sliding mounting bolts in slots on underside of boards and allow bolt thread to drop through bracket slots with bracket mounted in position. Some vehicles may need bracket bolts to be loosened up to allow front of bracket to drop to get bolts on underside of board to fit into slot on bracket. You will only need one bolt to hold board to bracket. Use two if slot and bracket line up. Retighten bolts on brackets keeping them in place on humps and snug to rocker panel. Tighten board on brackets to see if board is level. Readjust any brackets to assure level fit.
2. IMPORTANT: Check all bolts to verify completed mounting and tightness. Installation is complete

Fig A



Fig B

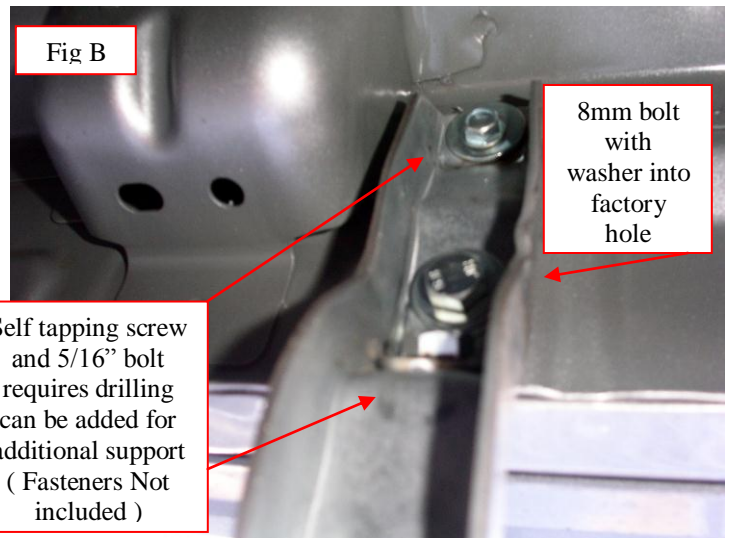


Fig C

